

QTY. 90037C325HHS BOLT, 3/8-16 x 3.25 3 90037SL-STSS WASHER, LOCKING - 3/8 4 90037AN-STSS WASHER, 3/8 AN 4 NUT, 3/8-16 90037CN-FNSS 1 90031C100HHS BOLT, 5/16-18 x 1.00 1 90031SL-STSS WASHER, 5/16 LOCK 1 90031AN-STSS 1 WASHER, 5/16 AN INSTALLATION INSTRUCTIONS: 1) MOUNT MAIN BRACKET, FIG. A & THE FRONT BRACKET, FIG. B TO THE BLOCK USING #1 BOLT, #2 WASHER & 3 LOCK WASHER IN LOWER BOLT HOLE. DO NOT TORQUE. 2) INSTALL ALTERNATOR SWING ARM, FIG. C,

DESCRIPTION

INTO THE UPPER BOLT HOLE USING SAME BOLT & WASHERS. DO NOT TORQUE. 3) INSTALL THE 2" WIDE ALTERNATOR BOSS INTO THE LOWER PART OF THE MAIN BRACKET USING #1 BOLT, #2 & 3 WASHER. ON THE BACK SIDE OF ALTERNATOR BRACKET INSTALL #4 NUT, #2 & 3 WASHERS. DO NOT TORQUE.


4) USING #6 BOLT, #4 & 5 WASHER, ATTACH ALTERNATOR TO THE SWING ARM. 5) INSTALL 33" LONG BELT, NOT SHOWN.

6) USING 9/16 SOCKET TORQUE 3/8 BOLT TO 35 FT. LBS..

7) USING 1/2 SOCKET TORQUE 5/16 BOLT TO 25 FT. I BS...

620-3147M-NC ALTERNATOR & 421-216 PULLEY IS NOT INCLUDED.

THIS DRAWING IS CONFIDENTIAL AND IS SUPPLIED ON EXPRESS CONDITION THAT IT SHALL NOT BE LENT, COPIED OR DISCLOSED TO ANY OTHER PERSON OR USED FOR ANY OTHER PURPOSE WITHOUT WRITTEN CONSENT OF HARDIN MARINE INC.. BREACH OF THIS CONTRACT WILL HOLD AND IT'S PRINCIPALS LIABLE FOR LOSS AND DAMAGES.

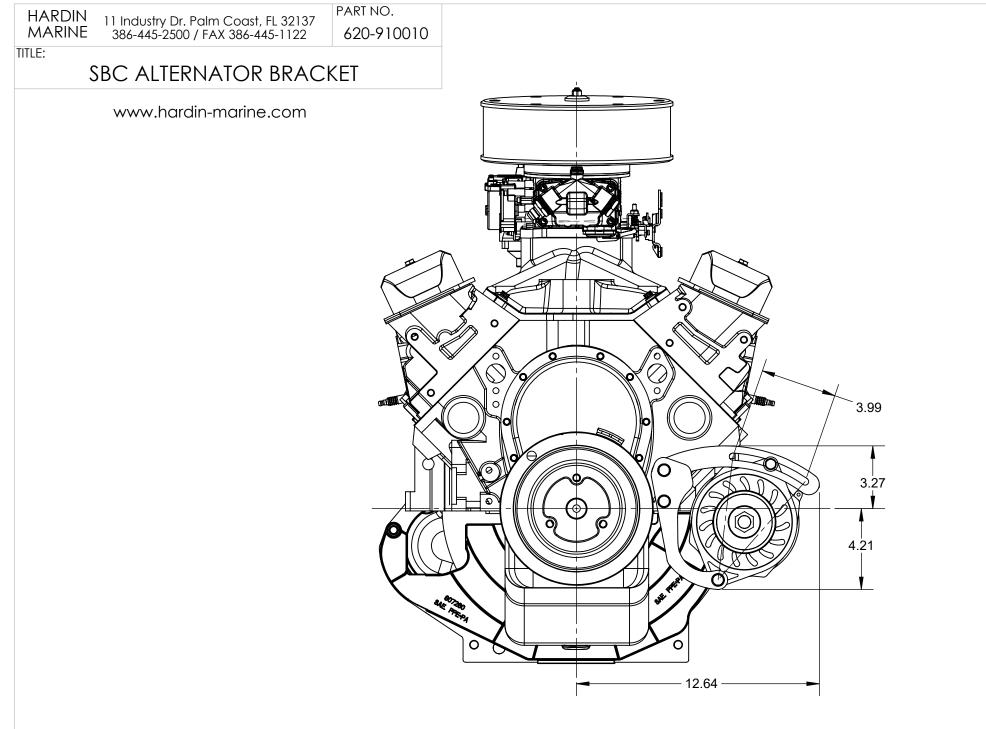

THIS DRAWING IS CONFIDENTIAL AND IS SUPPLIED ON EXPRESS CONDITION THAT IT SHALL NOT BE LENT, COPIED OR DISCLOSED TO ANY OTHER PERSON OR USED FOR ANY OTHER PURPOSE WITHOUT WRITTEN CONSENT OF HARDIN MARINE INC.. BREACH OF THIS CONTRACT WILL HOLD AND IT'S PRINCIPALS LIABLE FOR LOSS AND DAMAGES.