



INSTALLATION INSTRUCTIONS:  
 1) REMOVE THE STOCK BOTTOM UNIT FROM THE FUEL PUMP.  
 2) MAKE SURE THE BLACK DIAPHAM IS NOT TORN AND BRITTLE. IF SO THE UPPER UNIT WILL NEED TO BE REPLACED.  
 3) SLIDE THE STOCK UPPER UNIT ON TO THE NEW LOWER UNIT. SOME PUMPS, LIKE SHOWN, WILL ALLOW THE UNIT TO BE CLOCKED TO HELP WITH FUEL LINE PRUMBING.  
 4) APPLY RED LOCTITE TO SCREWS AND TORQUE TO 40 INCH LBS..  
 5) BOTH THE FUEL INLET AND OUTLET HAVE -8 AN FITTINGS.

THIS DRAWING IS CONFIDENTIAL AND IS SUPPLIED ON EXPRESS CONDITION THAT IT SHALL NOT BE LENT, COPIED OR DISCLOSED TO ANY OTHER PERSON OR USED FOR ANY OTHER PURPOSE WITHOUT WRITTEN CONSENT OF HARDIN MARINE INC.. BREACH OF THIS CONTRACT WILL HOLD ..... AND IT'S PRINCIPALS LIABLE FOR LOSS AND DAMAGES.

HARDIN MARINE 11 Industry Dr. Palm Coast, FL 32137  
 386-445-2500 / FAX 386-445-1122

TITLE:  
 FUEL PUMP UPGRADE INSTALLATION INSTRUCTIONS

SIZE	DWG. NO.	PART NO.	REV
A	755-5920	755-5920	
SCALE: 1:2		DRAWN BY: J.P.STULL	DATE: 10/08/08