



### HEADER COOLING WATER DIAGRAM

- Cold water from pump thru valve then into block.
- Hot water to headers and overboard.