
410-280172 3 1/2" Replacement Flap 410-280173 4" Replacement Flap

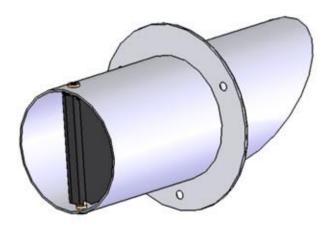


outside of flap.







- 1. To remove flap; strip away excess rubber from pin.
- 2. Support the bottom bushing with a metal object with a hole for the pin to protrude.
- 3. Use a pin punch to drive the flap pin down through the top bushing. (Pin should fall out).

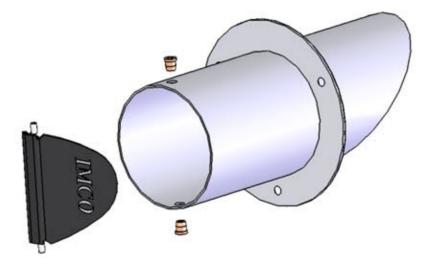

- 1. To install flapper; place flap pins in holes with IMCO logo on the outside.
- 2. Place bushings over each pin and started in the holes.
- 3. Support the bottom bushing with a metal base and hammer bushing until they are flush with outside of exhaust tip.
- 4. Use caution not to bend pin or distort the tip.