

# HARDIN MARINE


PART NUMBER: 130-1042 and 130-1045

DESCRIPTION:  
SPORT TECH DRIVE SHOWER FOR MERCUISER BRAVO XR OUTDRIVES

CENTER PUNCH &  
DRILL 9/32 HOLE

TEMPLATE

CENTER PUNCH &  
DRILL 1/2 HOLE

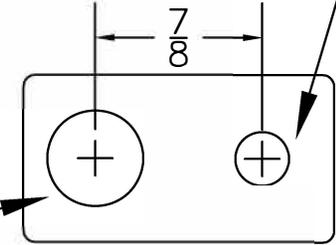

PLACE TEMPLATE EDGE TO  
OUTSIDE EDGE OF CAVITATION PLATE.

(4) 3/8-16x2-1/4" LONG BOLTS

SHOWER CAP

SPACERS

STAINLESS STEEL HOSE

## SHOWER CAP INSTALLATION INSTRUCTIONS:

- 1) SLIDE HOSE INTO REAR OF THE DRIVE SHOWER. INSTALL MOUNTING CLIP.
- 2) REMOVE THE (4) BOLTS FROM THE BEARING CAP.
- 3) PLACE SPACERS & SHOWER CAP ON TOP OF BEARING CAP.
- 4) INSTALL THE 3/8 BOLTS THROUGH THE TOP OF THE SHOWER CAP. TORQUE BOLTS TO 25 FT. LBS..
- 5) CUT OUT TEMPLATE AND TAPE TO EITHER THE RIGHT OR LEFT SIDE OF CAVITATION PLATE. IF YOU HAVE A SWIM STEP YOU NEED TO CHECK TO MAKE SURE DRIVE DOES NOT HIT STEP WHEN RAISED, ADJUST POSITION ACCORDINGLY.
- 6) CENTER PUNCH HOLES AND DRILL 1/2 HOLE THEN 9/32 AS SHOWN IN TEMPLATE.
- 7) REMOVE BURRS IN DRILLED HOLES.
- 8) PLACE HOSE THRU THE 1/2 HOLE AND MOUNT WITH 1/4 BOLT, NUT & WASHER. TORQUE TO 120-125 IN. LBS..

1/4-20 x 3/4" LONG  
BOLT, LOCKING NUT &  
WASHER

BOTTOM CAVITATION PLATE