

INSTALLATION INSTRUCTIONS: 1) BRACKET COMES FULLY ASSEMBLED. DOES NOT INCLUDED THE BELLHOUSING.

BRACKET MOUNTS TO THE 2 UPPER BOSSES ON THE BÉLLHOUSING, FIG. A. 3) APPLY ANTI SEIZE TO THE SUPPLIED 3/8-16 x 2-3/4


BOLTS, FIG. B.

4) SLIDE WASHERS OVER BOLTS AND INSTALL INTO THE BRACKET.

5) INSTALL THE 755-5119 SPACERS, FIG. C, BETWEEN THE BRACKET AND THE BELLHOUSING.

6) USE A 5/16 HEX SOCKET TO TORQUE TO 30 FT. LBS..

THIS DRAWING IS CONFIDENTIAL AND IS SUPPLIED ON EXPRESS CONDITION THAT IT SHALL NOT BE LENT, COPIED OR DISCLOSED TO ANY OTHER PERSON OR USED FOR ANY OTHER PURPOSE WITHOUT WRITTEN CONSENT OF HARDIN MARINE INC.. BREACH OF THIS CONTRACT WILL HOLD ....... AND IT'S PRINCIPALS LIABLE FOR LOSS AND DAMAGES.

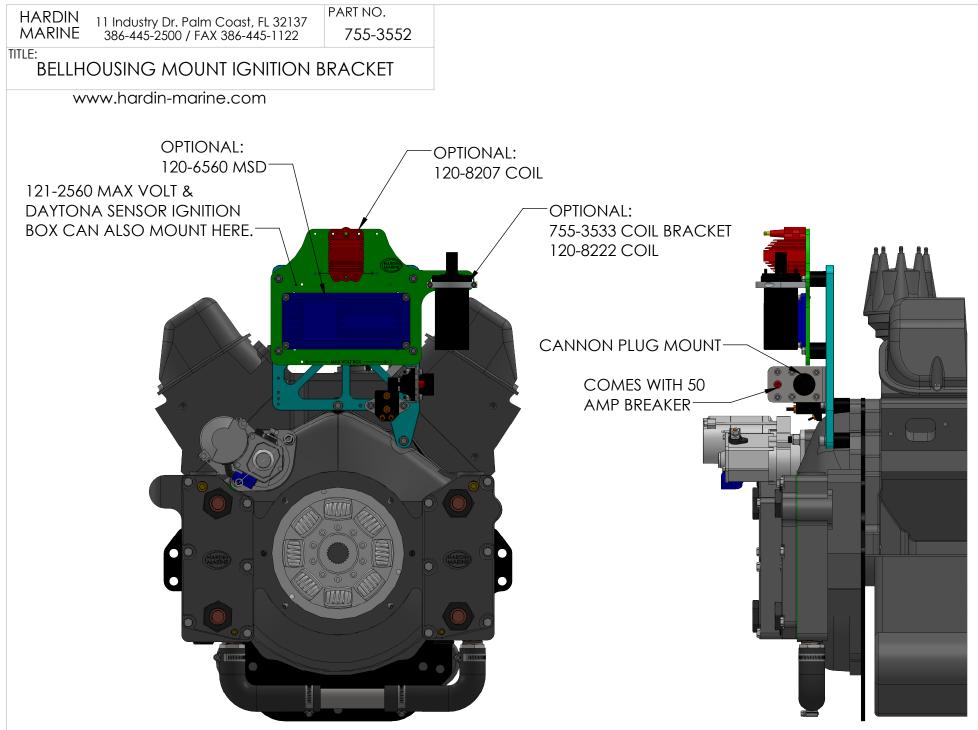

THIS DRAWING IS CONFIDENTIAL AND IS SUPPLIED ON EXPRESS CONDITION THAT IT SHALL NOT BE LENT, COPIED OR DISCLOSED TO ANY OTHER PERSON OR USED FOR ANY OTHER PURPOSE WITHOUT WRITTEN CONSENT OF HARDIN MARINE INC.. BREACH OF THIS CONTRACT WILL HOLD ....... AND IT'S PRINCIPALS LIABLE FOR LOSS AND DAMAGES.