


HARDIN MARINE 11 Industry Dr. Palm Coast, FL 32137
386-445-2500 / FAX 386-445-1122

PART NO.
410-1496

TITLE: V6 - V8 CHEVY LOW PROFILE SS
THERMOSTAT HOUSING

www.hardin-marine.com

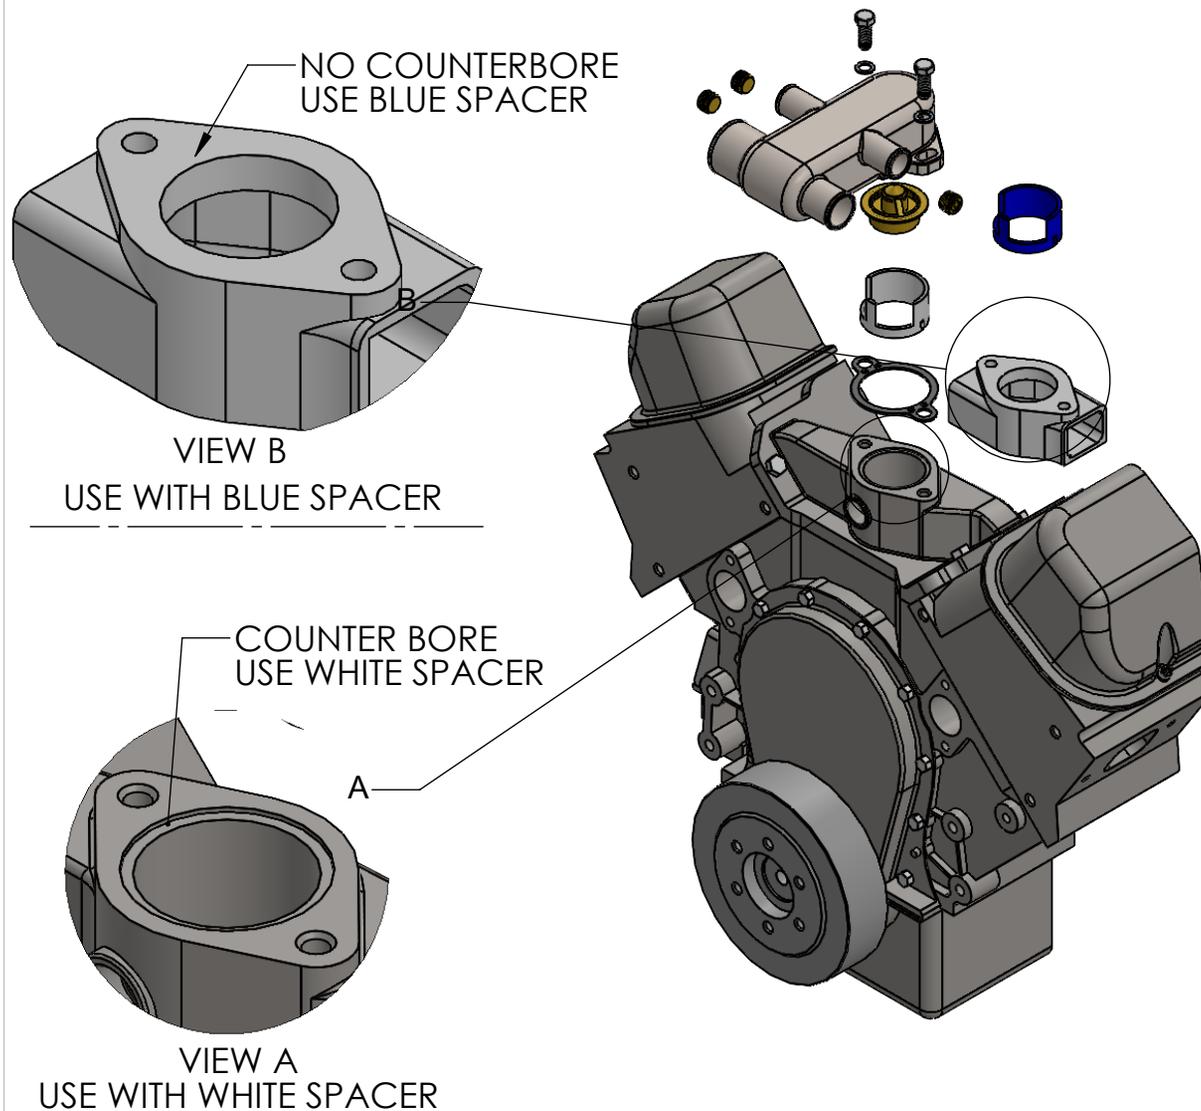

INSTALLATION INSTRUCTIONS:

- 1) CAN BE USED WITH COUNTER BORED OR NONE COUNTER BORED INTAKES. LOOK AT THE DETAILED VIEWS A & B TO DETERMINE WHICH SPACER TO USE.
- 2) APPLY BRUSH TACH TO BOTH SIDES OF THE SUPPLIED GASKET.
- 3) INSTALL THERMOSTAT, NOT SUPPLIED, UP INTO THE STAINLESS HOUSING.
- 4) INSTALL SPACER INTO STAINLESS HOUSING. THE SPACERS HAVE A BOSS THAT FITS UP INTO THE STAINLESS HOUSING. IT CAN ONLY GO IN ONE WAY.
- 5) USING THE SUPPLIED BOLTS AND WASHERS, INSTALL STAINLESS HOUSING. USING 9/16 SOCKET TORQUE TO 30 FT. LBS..
- 6) STAINLESS HOUSING HAS (3)3/8 NPT SENDER PORTS. ASSEMBLY IS SUPPLIED WITH 3 BRASS PIPE PLUGS IF PORTS ARE NOT NEEDED. IF INSTALLING PIPE PLUGS, USE LIQUID PIPE SEALANT.
- 7) STAINLESS HOUSING HAS 1-1/4 WATER INLET BARB, 1-13/16 CIRCULATING PUMP BUNG AND DUAL 1" EXHAUST BARBS. SEE THE OTHER PRINT SHOWING HOSE PLUMBING.

THERMOSTATS SOLD SEPARATELY:




- 540-160110 120 DEGREE
- 540-160106 142 DEGREE
- 540-160101 160 DEGREE
- 540-160108 180 DEGREE

HARDIN MARINE 11 Industry Dr. Palm Coast, FL 32137
386-445-2500 / FAX 386-445-1122

PART NO.
410-1496

TITLE: V6-V8 CHEVY LOW PROFILE SS
THERMOSTAT HOUSING

www.hardin-marine.com

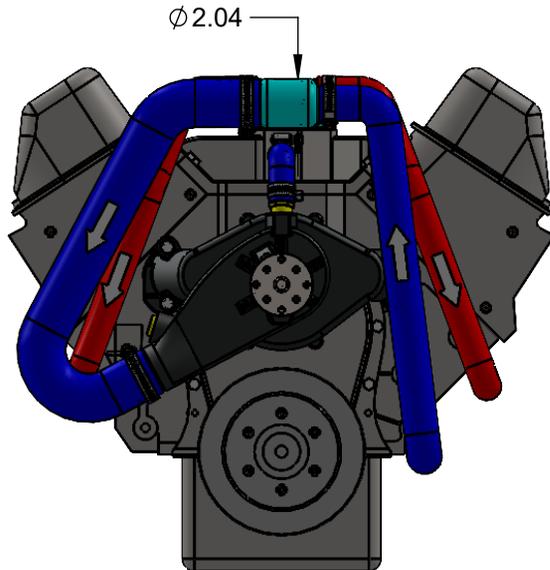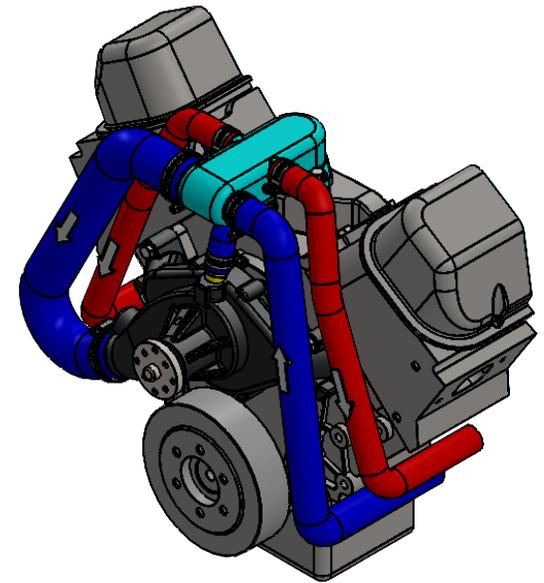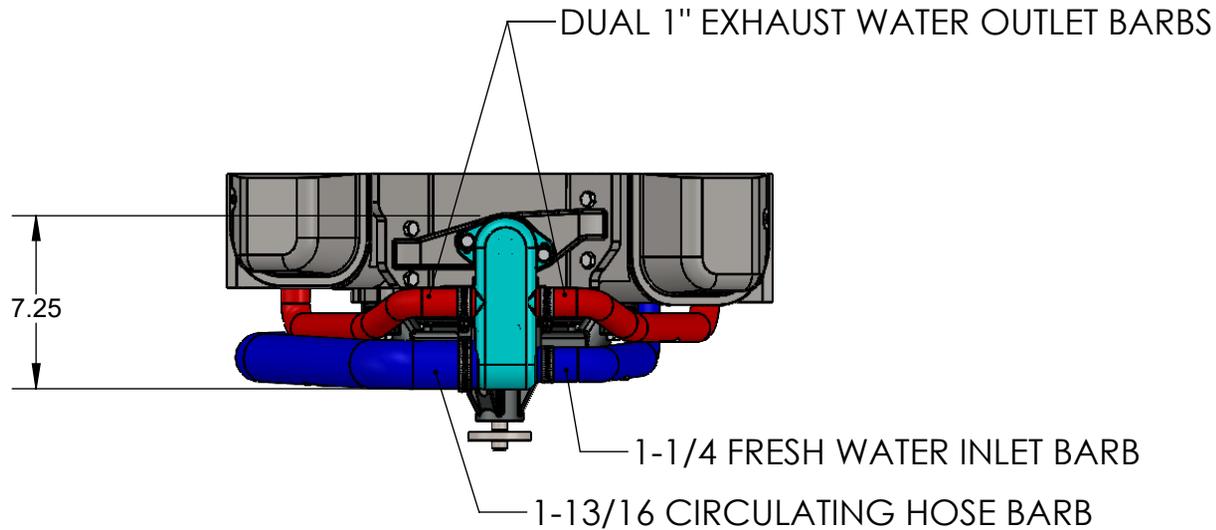

THIS IS A STANDARD RAW WATER THERMOSTAT HOUSING. THIS HOUSING ALLOWS WATER TO BE BYPASSED TO THE EXHAUST MANIFOLDS UNTIL THE THERMOSTAT OPENS. ONCE THE THERMOSTAT OPENS, ALL IN COMING WATER IS CIRCULATED THROUGH THE ENGINE BEFORE GOING OUT THE EXHAUST.