



POWER STEERING BRACKET



625-8108



Attach bracket over the closed cooling tank port mount bracket using the 2 longer supplied bolts.



Install 1/4" spacer washer taper side towards the saginaw pump.

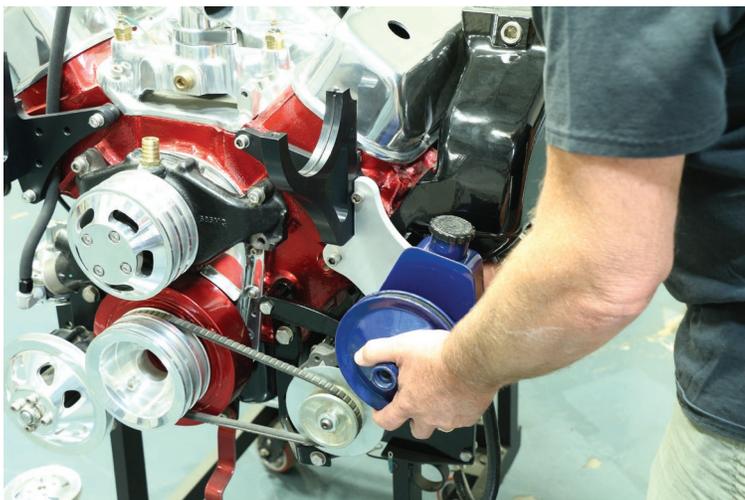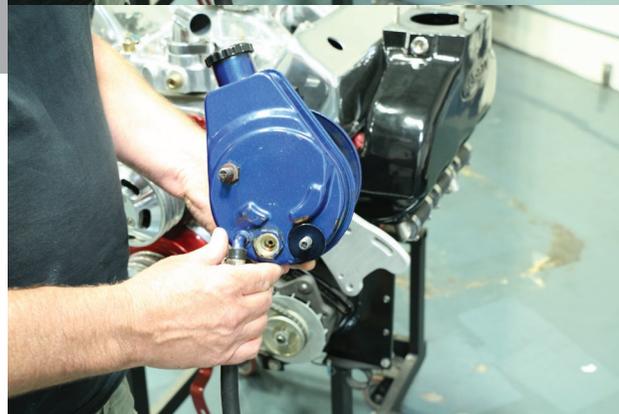

Put the pump on the bracket using the 3/8" hole and slot at the end of the bracket.

If using the plastic housing pump mounts it directly to the bracket using the 5/16" tapped hole and the slot closest to the engine.

